

## PolyU COMP PC Nvidia Setting reset Quick fix Guide.


If users see there are 3 screens in the system. It means the Nvidia graphic card setting has been reset.

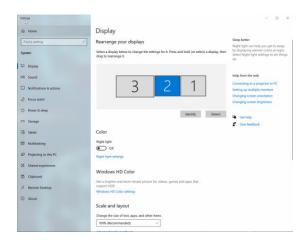


Firstly, close the application such as "caveLauncher" "Motive" "SteamVR".




Second, Right click on the desktop. Select Nvidia Control Panel.

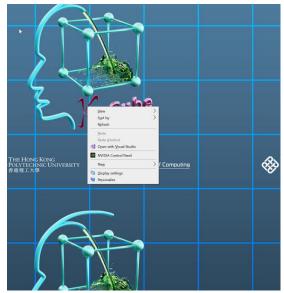


You will see this pop up, select "Configure SLI,Surround ,PhysX" on the left side. Press "Configure" button.

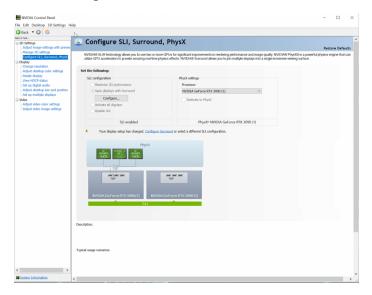

If you see this pop up appear, close those apps and press continue.

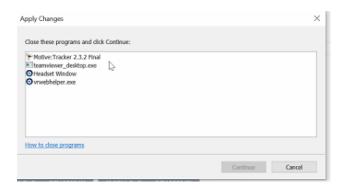


The setup Surround panel will pop up as here, please arrange the screen number to 1 then 2 Topology set to 1X2 and resolution set to 8192X2160 60Hz. Then press "Enable Surround"

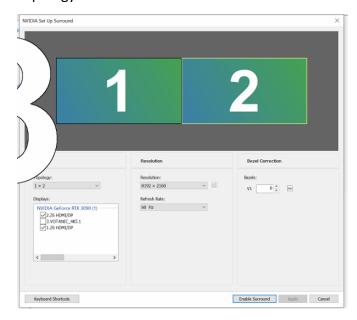


After that, the monitor screen will disappear. You need to operate at the LED screen. Press Alt + F4 to close the set up surround panel.



Then go to "Set up multiple displays" page in "Nvidia control Panel", Enable the Votanic\_4K5.1 monitor.

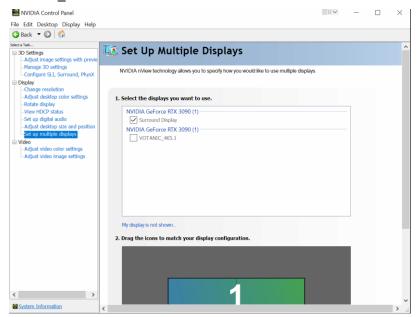


The result should look like this.

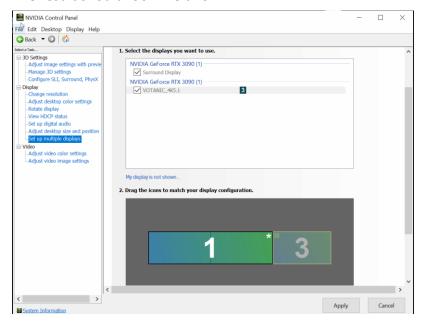


Then you need to drag the screen to the left-hand side.

## 2. Drag the icons to match your display configuration.

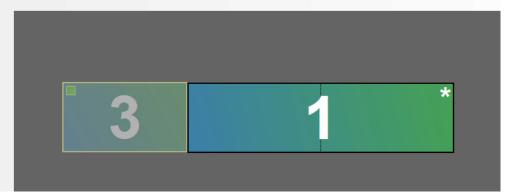


Press the Apply button on the bottom, The second you press the apply button. You will have 15 seconds to confirm the setting. You may press the left arrow once then press Enter to confirm the changes.

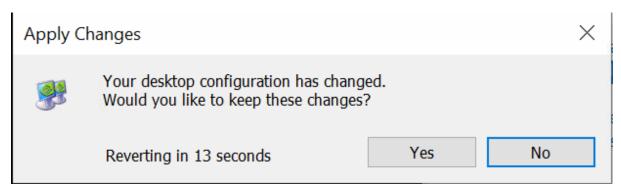


After that. User may need to turn on and off the Amp to see the monitor image after this step.


In this point. The resolution is not correct on the LED panel. Please go to Change resolution page to change the resolution to 5120 X 2048.

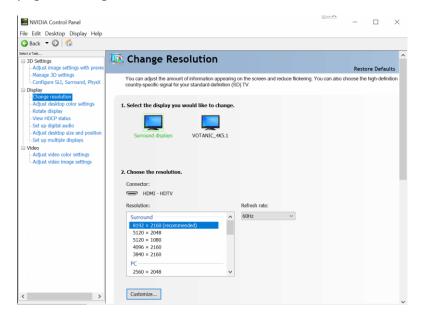


## Then press Apply.

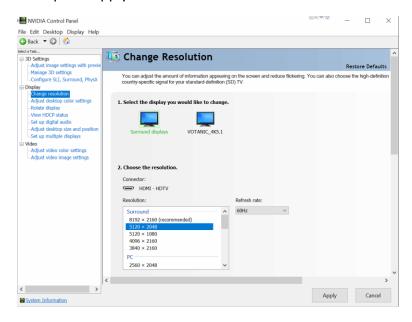


A count-down pop up will appear again. Press left arrow and enter to confirm the changes.

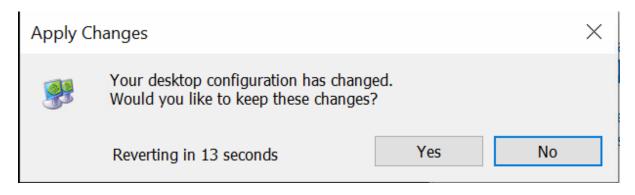

Lastly, you need to check the surround sound setting. Go to set up digital audio setting.

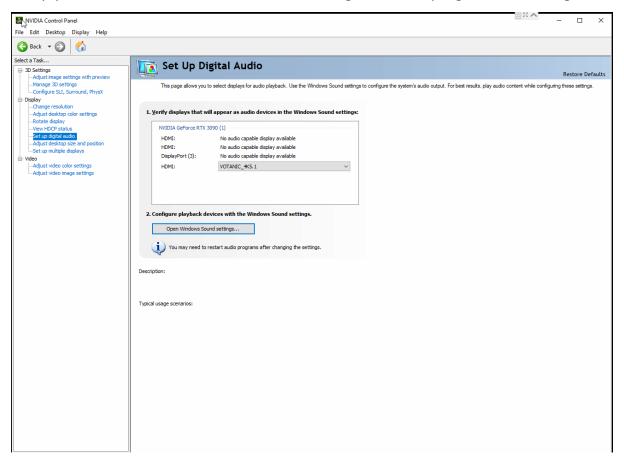

Open Windows Sound setting, make sure the Votanic\_4K5.1 is the default device. Click configure to open the speaker setup. The arrangement should be 5.1 surround.

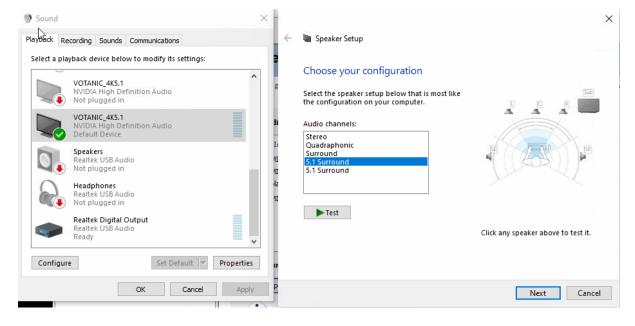

You may now open the launcher and close the system and restart it once to confirm the result has been save into the system.